


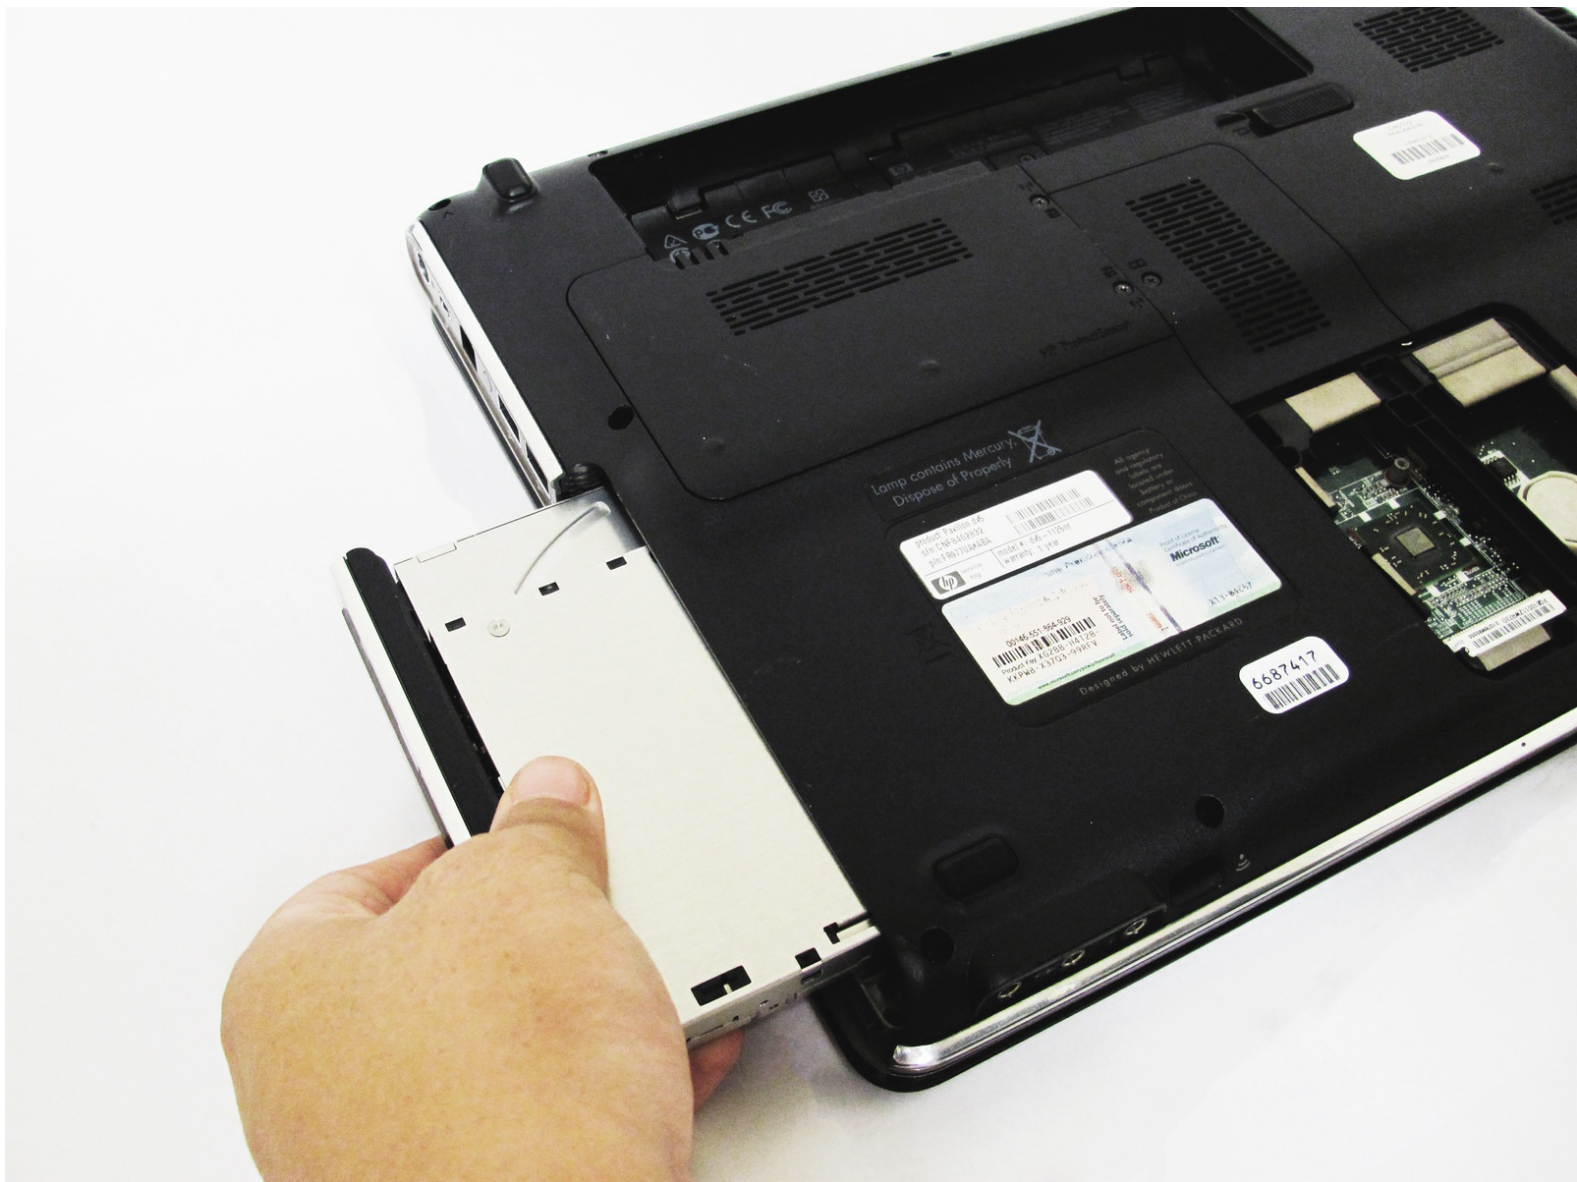

# HP dv5-1125nr Disk Drive Replacement

This drive will show you how to replace your optical disk drive.

Written By: Nick Loey



## INTRODUCTION

Replacing your optical drive is not a complex process. Follow this guide to learn how!

---

### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



- Ensure your computer is shut down.
- ⚠ Removing the battery while the laptop is still on may corrupt your files.
- Remove any power adapters and cords connected to the laptop body.
- Turn the computer over so the bottom is facing up.
- ⓘ These pictures show no battery, but your battery should still be in your computer at this point.


## Step 2

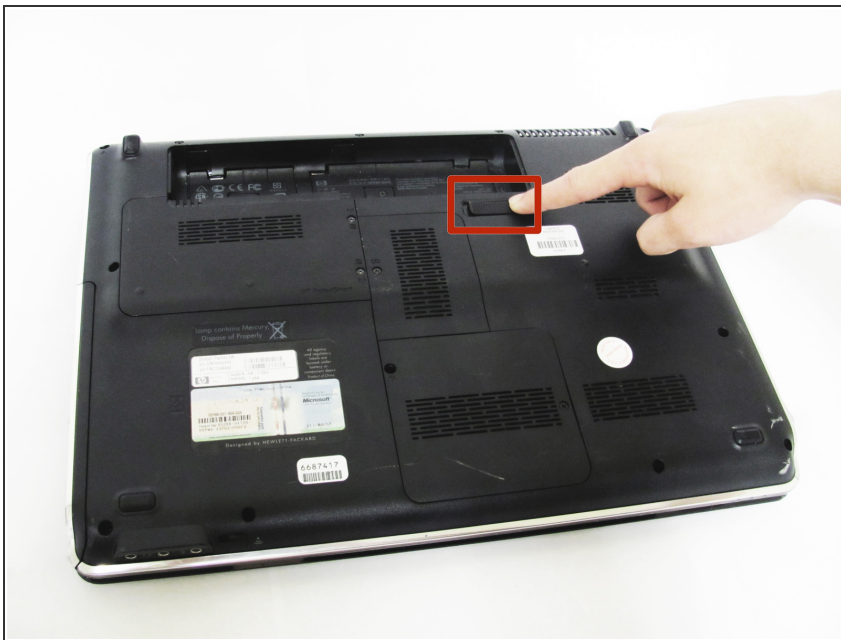

- The battery release is below the bottom right corner of the battery bay.
- Slide the switch to the right until the release clicks.



## Step 3

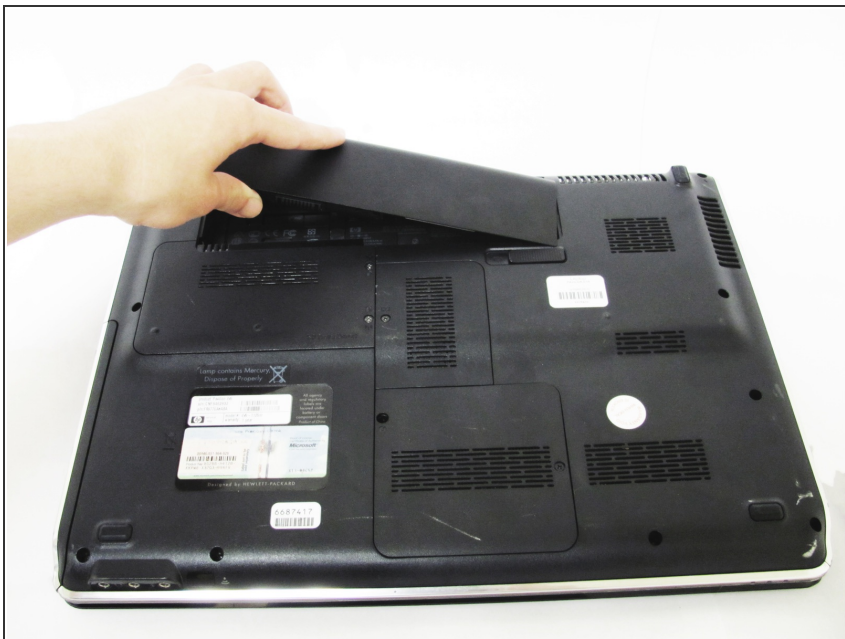

- Remove the battery.



**i** The release switch may need to be held down while removing the battery.

## Step 4 — Disk Drive



- Locate two 3mm Phillips screws on the CMOS panel cover and remove them with a Phillips #00 screwdriver.
- Remove the CMOS panel cover.

## Step 5

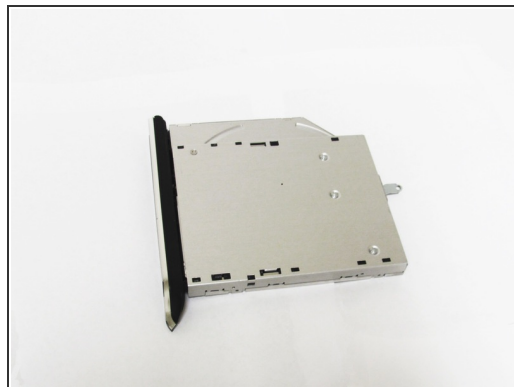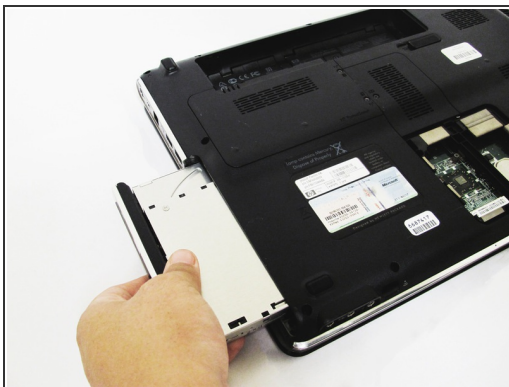

- The optical drive is now ready for removal. Using a plastic removal tool, lift the optical drive away from your computer.
- Using your hands, slide the remainder of the drive out of the computer.

---

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-26 03:16:32 PM.